

## Foto & Video Spezialteile // Photo & Video special parts



**CROSS CB2.4**  
Blitzzubehör  
Flash unit accessories  
[40024]



**CROSS CX140**  
Handyhalter  
Mobile phone holder  
[41140]



**CROSS CX122**  
Objektklammer  
Object clamp  
[41122]



**CROSS CX664**  
Reflektorhalter  
Reflector holder  
[40664]



 
**CROSS CX662**  
Blitzschuhadapter  
Hot shoe adapter  
[40662]



**CROSS CX667**  
Adapter Block  
Adapter block  
[40667]



**CROSS CX124**  
Multiklammer  
Multi clamp  
[41124]



**CROSS CX697**  
Blitzschuh 1/4 Zoll  
Hot shoe 1/4 inch  
[40697]



**CROSS CX610**  
Wechselteller 1/4 - 3/8 Zoll  
Adapter plate 1/4 - 3/8 inch  
[40610]



**CROSS CX606**  
Kamerateller 1/4 Zoll  
Camera plate 1/4 inch  
[40606]



**CROSS CX128**  
Fixierklammer  
Fix clamp  
[41128]



**CROSS CX116**  
Schwanenhals M  
Gooseneck M  
[41116]



 
**CROSS CX108**  
Verlängerungssäule  
Extension column  
[41108]



**CROSS CX110**  
Verbindungssäule  
Connection column  
[41110]



**CROSS CX118**  
Schwanenhals L  
Gooseneck L  
[41118]

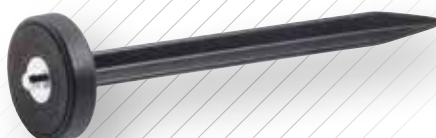

**CROSS CX660**  
Erdspieß  
Ground spike  
[40660]

## Foto & Video Spezialteile // Photo & Video special parts

### Technische Daten // Technical Data

Produkt Nr. Product No.	Produktname Product name	Material Material	Breite / Höhe / Tiefe (mm)* Width / Height / Depth (mm)*	Klemmbereich (mm) Clamping range (mm)	Tragfähigkeit (kg) Max. load (kg)	Gewicht (g) Weight (g)
<b>CROSS Foto &amp; Video Spezialteile // Photo &amp; Video special parts</b>						
40024 40024	<b>CROSS CB2.4 Blitzzubehör</b> CROSS CB2.4 Flash unit accessories	Aluminium Aluminium	–	–	1	120
40606 40606	<b>CROSS CX606 Kamerateller 1/4 Zoll</b> CROSS CX606 Camera plate 1/4 inch	Kunststoff Plastic	–/15/–	–	–	22
40610 40610	<b>CROSS CX610 Wechselteller 1/4 – 3/8 Zoll</b> CROSS CX610 Adapter plate 1/4 – 3/8 inch	Kunststoff Plastic	–/20/–	–	–	38
40660 40660	<b>CROSS CX660 Erdspeiß</b> CROSS CX660 Ground spike	Aluminium Aluminium	–/155/–	–	–	20
40662 40662	<b>CROSS CX662 Blitzschuhadapter</b> CROSS CX662 Hot shoe adapter	Aluminium Aluminium	–/22/–	–	–	20
40664 40664	<b>CROSS CX664 Reflektorhalter</b> CROSS CX664 Reflector holder	Aluminium Aluminium	–/30/–	–	–	23
40667 40667	<b>CROSS CX667 Adapter Block</b> CROSS CX667 Adapter block	Aluminium Aluminium	20/25/20	–	–	20
40697 40697	<b>CROSS CX697 Blitzschuh – 1/4 Zoll</b> CROSS CX697 Hot shoe – 1/4 inch	Kunststoff Plastic	–/15/–	–	–	14
41108 41108	<b>CROSS CX108 Verlängerungssäule</b> CROSS CX108 Extension column	Aluminium Aluminium	–/110/–	–	–	44
41110 41110	<b>CROSS CX110 Verbindungssäule</b> CROSS CX110 Connection column	Aluminium Aluminium	–/225/–	–	–	104
41116 41116	<b>CROSS CX116 Schwanenhals M</b> CROSS CX116 Gooseneck M	Aluminium Aluminium	–/160/–	–	–	96
41118 41118	<b>CROSS CX118 Schwanenhals L</b> CROSS CX118 Gooseneck L	Aluminium Aluminium	–/297/–	–	–	182
41122 41122	<b>CROSS CX122 Objektklammer</b> CROSS CX122 Object clamp	Aluminium Aluminium	72/93/40	–	–	38
41124 41124	<b>CROSS CX124 Multiklammer</b> CROSS CX124 Multi clamp	Kunststoff Plastic	26/80/23	–	–	16
41128 41128	<b>CROSS CX128 Fixierklammer</b> CROSS CX128 Fix clamp	Aluminium Aluminium	15/100/38	–	–	30
41140 41140	<b>CROSS CX140 Handyhalter</b> CROSS CX140 Mobile phone holder	Kunststoff Plastic	–/50/–	40-68	–	55